

One Year Limited Warranty

The manufacturer warrants every Biffy product to be free from manufacturing defects under normal use for a period of one year from the date of purchase. This warranty is extended only to the original purchaser.

Terms of Warranty:

The American Biffy Company, Ltd. will repair or replace, at their discretion, products or parts found to be defective. Our liability is limited to repair or replacement only and we are not liable for consequential or incidental damages. There are no implied or expressed warranties. Shipping charges to the manufacturer are non-refundable.

Limitations of Warranty:

This limited warranty does not cover (1) Damage or loss sustained in a natural occurrence, i.e. earthquake, fire, etc., (2) Damage or loss due to improper installation, negligence, misuse or abuse and (3) Damage or loss resulting from foreign materials or chemicals in water supply.

Warranty Service:

To obtain warranty repair or replacement, contact manufacturer at:

American Biffy Company, Ltd.
706 Wells Road
Boulder City, NV 89005 USA
702-294-0055 Telephone
702-294-0649 Fax
Sales@biffy.com Email

American **Biffy**® Company

 
Visit our website for new product news
www.biffy.com



Congratulations on your purchase of a Biffy®
Bun Warmer!




Installation Tools Needed

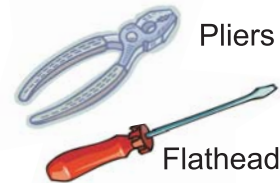

Pliers

Flathead

 Parts included in Package

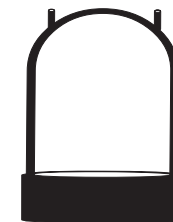

Biffy®
**Bun
Warmer**

 
If you already
have an
existing Biffy:



Hose
clamp

Brass
barb

Biffy Bun Warmer Installation Diagram

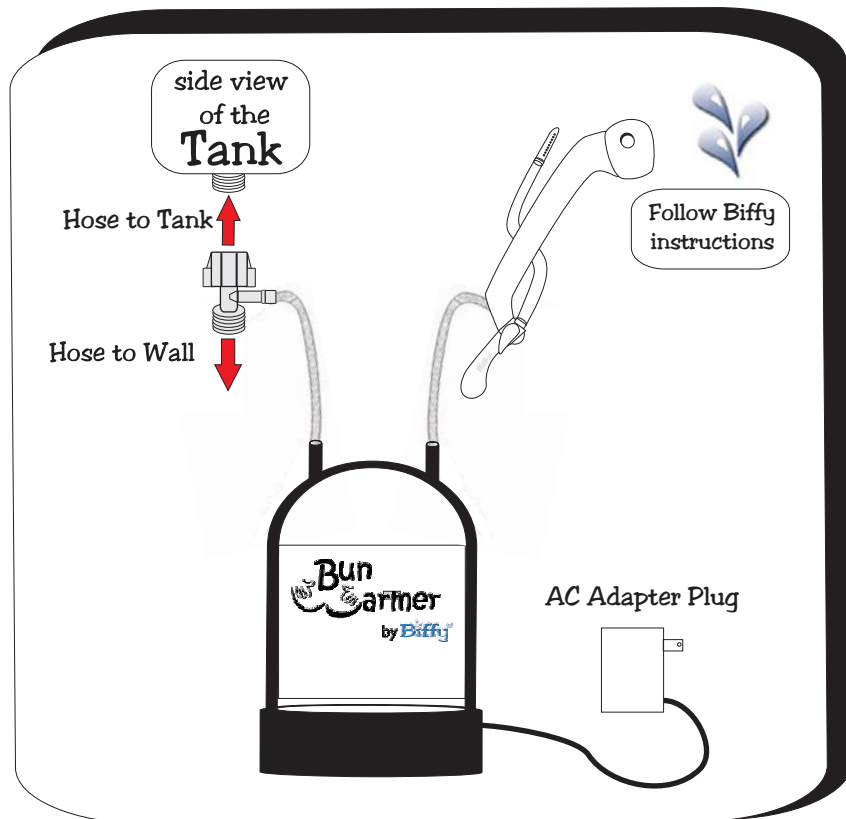

WARNINGS:

- The Biffy Bun Warmer is not a toy. It will heat up and may appear hot to the touch. It is safe to leave your Biffy Bun Warmer running continuously 24 hours a day, but it should be used responsibly at all times.
- Do not use this appliance for other than its intended use.
- Do not store your Biffy Bun Warmer while hot or still connected to the power supply.
- Do not immerse the Biffy Bun Warmer in water or any other liquid.
- Do not allow the cord set to come into contact with water during operation.
- This product should not be used outdoors.
- Do not place the Biffy Bun Warmer in a location where it may fall into a tub or shower, or otherwise become immersed in water; and if the Biffy Bun Warmer falls into water, immediately unplug it. Do not reach into the water.

Please Read ALL installation instructions
carefully prior to installation.

Step 1 - Connect to Water Supply

Turn off the water supply at the wall. Unscrew the water supply line and insert the **Biffy** T-adapter between the tank and the supply line. Tighten all fittings.

Step 2 - Attach to Biffy A - New Biffy

Screw the brass barb, at the end of the hose of your new Biffy, onto the available spout of the Bun Warmer tank. Make sure to tighten completely with pliers. Please follow the Biffy installation instructions to attach your Biffy to the toilet. Turn on the water supply at the wall to fill the Bun Warmer reservoir. Plug the AC adapter into your nearest electrical outlet.

B - Existing Biffy

Cut the water line approximately two inches from the brass clamp at the Biffy T-Adapter end. Place the hose clamp over the hose connected to the Biffy. Push hose onto barb of Bun Warmer. Tighten clamp over barb using a phillips screwdriver. **Please ensure hose clamp is sufficiently tightened, as the American Biffy Company, Ltd. is not responsible for any leaks.** Turn on the water supply at the wall to fill the Bun Warmer reservoir. Plug the AC adapter into your nearest electrical outlet.

IMPORTANT: Check for any water leakage. As with all plumbing appliances, if your Biffy Bun Warmer is unattended for a great period of time, we advise the water supply be turned off.